

# BVF 24-X

16A RF receiver




### TECHNICAL DATA

Receiver Current Load:	230V, 50/60Hz
Capacity:	max. 3600W/16A
External sensor:	NTC 10kΩ @ 25°C
Frequency:	868MHz
Dimensions:	86mm x 86mm x 26mm
Relay inst. dimensions:	Ø 65 mm diameter, min. 55mm depth
Color:	White
IP protect rating:	IP 20
Certification:	CE



RF)))

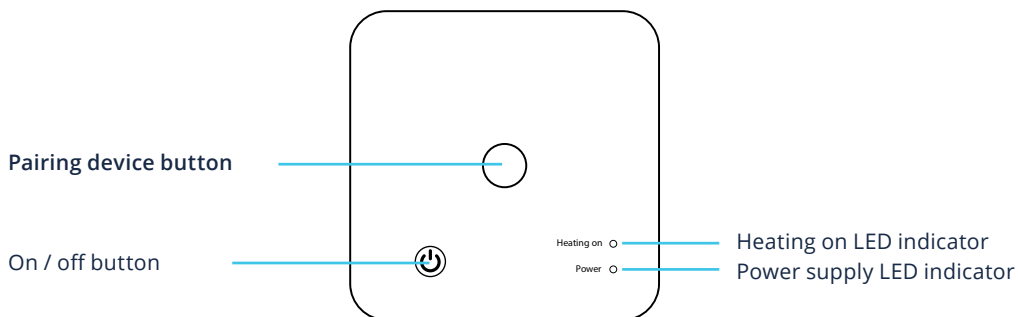

### PAIRING WITH 24-F

Adjust sender (24-F) parameter setting item 04 to 1 or 3 before pairing.

1. Long press the code pairing button on the receiver until LED flash.
2. Turn off sender by press on/off button, and long press **...** until the RF code shows on the screen (XXXX), then please rotate button to left or right, icon starts flashing.
3. Wait for a while till icon stops flashing. Code pairing finished.

### WIRING DIAGRAM

