

BVF 24-X


16A RF receiver



RF)))

TECHNICAL DATA

Receiver Current Load:	230V, 50/60Hz
Capacity:	max. 3600W/16A
External sensor:	NTC 10kΩ @ 25°C
Frequency:	868MHz
Dimensions:	86mm x 86mm x 26mm
Relay inst. dimensions:	Ø 65 mm diameter, min. 55mm depth
Color:	White
IP protect rating:	IP 20
Certification:	CE

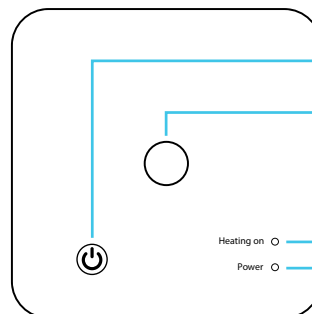

- On / off button
- Pairing device button
- Heating on LED indicator
- Power supply LED indicator

PAIRING WITH 24-F

Enter parameter setting page (see the details in the 24-F manual), then select the appropriate setting in sensor select menu nr. 4 as follows:

- Use **Setting 1** for floor heating (double sensor setting)
- Choose **Setting 3** for comfort floor heating (floor sensor only)
- **Setting 0** is only applies to infrapanel heating with single room sensor function
- ⊘ Use **Setting 2** solely for 24-A and 24-P receivers (room sensor only, unable to work with 24-X unit)

Important notice: according to the settings, you can connect only the same type of receiver with a single 24-F controller.

Pairing process

1. Long press the code pairing button on the receiver until LED flash.
2. Turn off sender by press on/off button, and long press **...** until the RF code shows on the screen (XXXX), then please rotate button to left or right, icon starts flashing.
3. Wait for a while till icon stops flashing. Code pairing finished.

WIRING DIAGRAM

